


CIS1910

HD image sensor with
sCMOS 2.0 technology

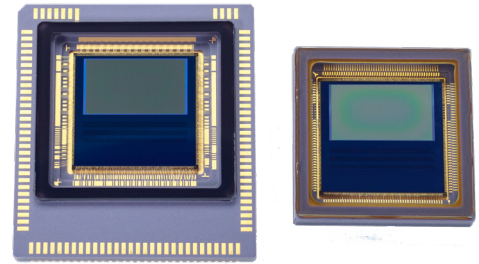

The CIS1910 is a large-format, ultra low-noise sensor intended for applications requiring high-quality imaging under extremely low-light conditions.

The CIS1910A imaging device delivers HD imaging for a variety of low-light-level camera applications, including professional video, security/ surveillance, industrial, and medical uses. This HD sensor delivers extreme low-light sensitivity with read noise less than 1.2e- RMS in Rolling Shutter and less than 4e- RMS in Global Shutter modes. Housed in a 105-pin ceramic LGA package, the sensor incorporates sCMOS 2.0 technology utilizing a five transistor (5T) and 6.5µm pixel architecture delivering greater than 50 percent quantum efficiency.

CIS1910 has two ADC channels per column with one optimized for low-light levels and the other optimized for high-light levels, enabling intra-scene high dynamic range of over 88dB. The sensor supports user-programmable row start/stop control for region of interest (ROI) readout mode. These features, combined with 2.1 megapixel resolution and 100 fps imaging rates ensure high-quality imagery across many different applications.

Key features and benefits

- Rolling Shutter (RS) and global Shutter (GS) offer additional operational modes for more application flexibility
- Superior low light image quality allows for reduced illumination requirements
- 88 dB intra scene dynamic range shows more detail in high contrast scenes
- 100 fps at full HD 1080P creates no motion blur

Applications

- Scientific
- Medical
- Industrial
- Professional video
- High-end security

Ideal for capturing scenes in extreme lighting conditions

Specifications

Sensor

Optical format	1"
Configurations	RGB or Monochrome
Active array	1920 (H) x 1080 (V)
Active area	12.5 mm X 7.0 mm
Active diagonal	14.32 mm
Frame rates	100 fps (RS), 50 fps (GS)
ADC resolution	22 bits (2 x 11-bit)

Pixel

Pixel size	6.5 μm x 6.5 μm
Shutter types	Rolling Shutter and Global Shutter
Read noise ¹	<1.2 e- RMS (RS) <4 e- RMS (GS)
Dynamic range	>88 dB
Peak QE	>50%
Full Well Capacity	>30,000 e-
Dark Current	<25 e-/ pixel/ sec

Interface

I/O Interface	Digital: 1.8V LVCMOS and 1.8V HSTL
---------------	---------------------------------------

Operating

Power consumption	<0.8 with dual ADC channels (100 fps)
Supply voltages	-0.4V, 1.8V, 3.0V, 3.3V
Operating temp	-40°C to +55°C


Packaging

Package	105-pin CLCC (tall standard) 101-pin CLCC (scientific)
Coverglass	AR coated sealed window; temporary window


¹Median value, high gain output (30x)

²At 20°C

QE Curve

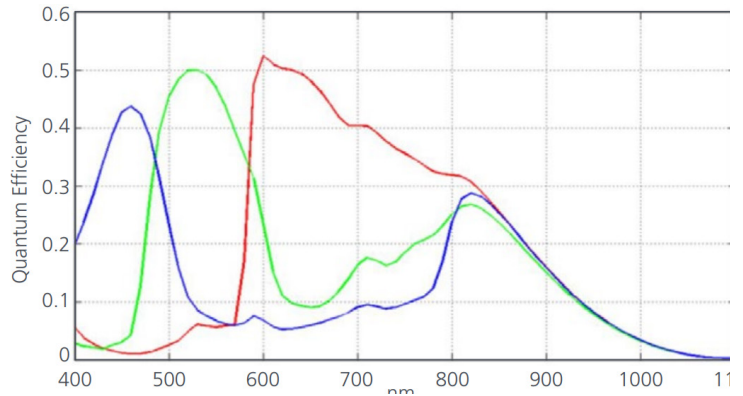

Dimensions

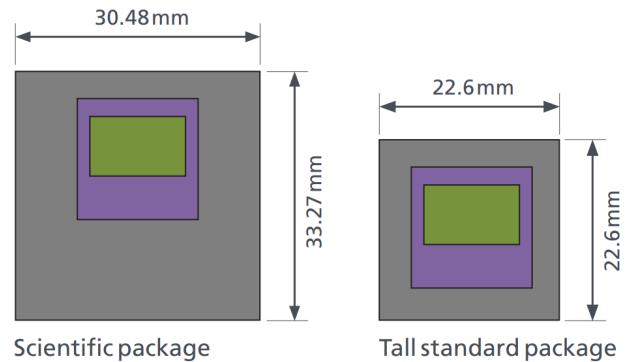

For more information contact:
Fairchild Imaging, Inc.
1841 Zanker Rd., Ste. 50
San Jose, CA 95112 USA

T: 1-408-433-2500
E: sales@fcimg.com

Disclaimer and copyright

This document gives only a general description of the product(s) and service(s) and, except where expressly provided otherwise, shall not form any part of any contract. From time to time, changes may be made in the products or the conditions of supply.

Fairchild Imaging is a registered trademark of Fairchild Imaging, Inc.
Hamamatsu is a registered trademark of Hamamatsu Photonics K.K.